

SURFCOM TOUCH

Easy and simple operation,
global standardized for easy operation.

SURFCOM TOUCH 550



SURFCOM TOUCH 50



SURFCOM TOUCH 35



■ Excellent GUI (instruction-free)



Specially developed amplifier has 7 inch wide touch panel and new user-friendly interface. It greatly improves operability without any instruction.

■ Supporting multi-language for worldwide use

Supports 20 languages including Japanese, English and German. Languages can be changed easily by touching monitor.

■ Pick-up with high resolution and wide range*

High-performance pick-up with Resolution 0.0001 μm , Measurement range 1000 μm .

The wide-range pick-up brings the analysis by 1 trace measurement without concerning its ranges even in undulating profile. Easily operate the Levelling and finding Zero point.

*Only with SURFCOM TOUCH 50

■ USB port and built-in printer *No Printer model is available


SURFCOM TOUCH 35/40/45/50

■ Selectable from 4 types according to the application



Standard TOUCH 35

Measurement in any orientation, flat, vertical, tilt and ceiling surface.

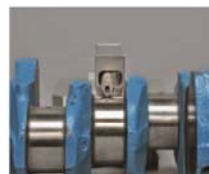

Horizontal Tracing TOUCH 45

Measurement on crankshaft pins and journals, which was difficult to perform with conventional machines, can be performed.



Retract TOUCH 40

The pick-up retracts (or rises) while waiting or when measurement completes. Can be used as a detector to be integrated into an automated machine.



Small but full-fledged TOUCH 50

With same high resolution and wide range pick-up as SURFCOM NEX 001. Measurement of roughness such as waves, steps and R surfaces, and fine forms can be performed.