



FEATURING THE
UNIQUE UNIVERSAL
PLIER WRENCH



INDUSTRIAL PLIERS

FOR A SECURE GRIP & EXACT CUTS



PLIERS

THE INDUSTRIAL STRENGTH YOU NEED


THE WILLIAMS® ADVANTAGE

HIGH-LEVERAGE JOINT PLACEMENT - distance from joint to center of cutting edges is reduced for greater leverage, increased cutting capacity and to reduce the required cutting force.

Cutter designed with **PROGRESSIVE EDGES** that cut both soft cables at the tip and hard wires close to the joint. The cutter features induction-hardened cutting edges, extending tool life and is capable of cutting up to 1/16" hard steel wire.

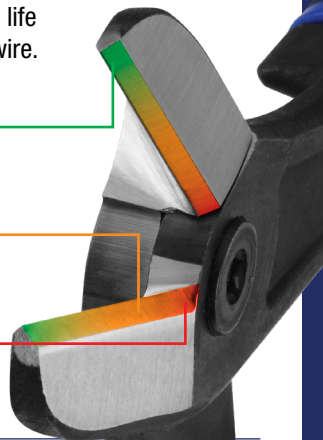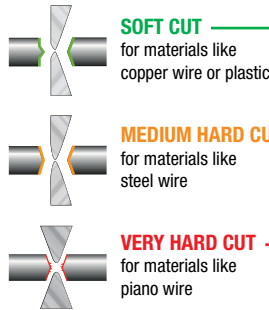

RETURN SPRING features self-opening handles when spring is activated to reduce hand fatigue, and turns off to store in tool belt or pocket.

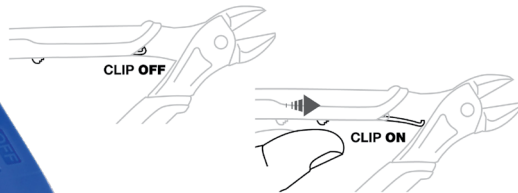

HARDENED TEETH provide extreme durability for a more secure grip and better turning power.

WORK IN COMFORT - ergonomically designed two-component handles provide durability and a comfortable, secure, non-slip grip.

ANTI-CORROSION TREATED with phosphate finish for long tool life.

CUTTING PLIERS



SIDE CUTTING COMBINATION PLIERS

FLAT NOSE PLIERS



QUICK

GET ORGANIZED

Our easy-to-use online catalog walks you through our step-by-step builder to help you choose the right tool set for your box color, tool drawer layouts. Our tool sets custom designed for industrial applications like fleet maintenance, maintenance, oil and power generation.



STRONG.

We have refined and improved the steel alloy to strike a perfect balance between resiliency and toughness.

VALUED.


Williams® plier range provides the best possible solution for demanding industrial applications.

NEED FOR GRIPPING & CUTTING

CUSTOM FIT TOOL ORGANIZATION SYSTEM

ORGANIZED. SAVE TIME.

Online configurator
a step-by-step
choose
sets and
choose from
designed for
ions from
to facility
and gas and
and more.

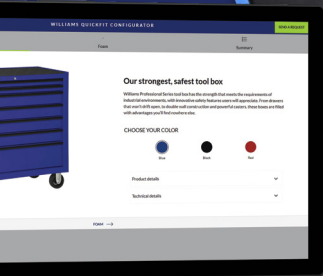

START YOUR CONFIGURATION TODAY!

<https://configurator.williams-industrial.com>

UNIVERSAL PLIER WRENCH

UNIQUE TOOL WORKS ON A PIPE AND A FASTENER

Inwardly angled teeth (fine teeth at back of jaws, larger teeth at front) for a stronger, more secure grip on objects of different sizes with less slippage than a traditional pipe wrench

Narrow jaws for extra accessibility in cramped corners

Heavy-duty design - high performance tool steel construction adds extra strength

Lock it in - easily lock into the desired position with the adjusting nut

Built-in pinching protection on inner handle

Reduces repetitive motion - Quickly adjust grip width without opening the hand

Built-in security with the unthreading guard

Jaw grip increases when pressure is put on the handle




LONG NOSE PLIERS

ROUND NOSE PLIERS

45° CURVED NOSE PLIERS



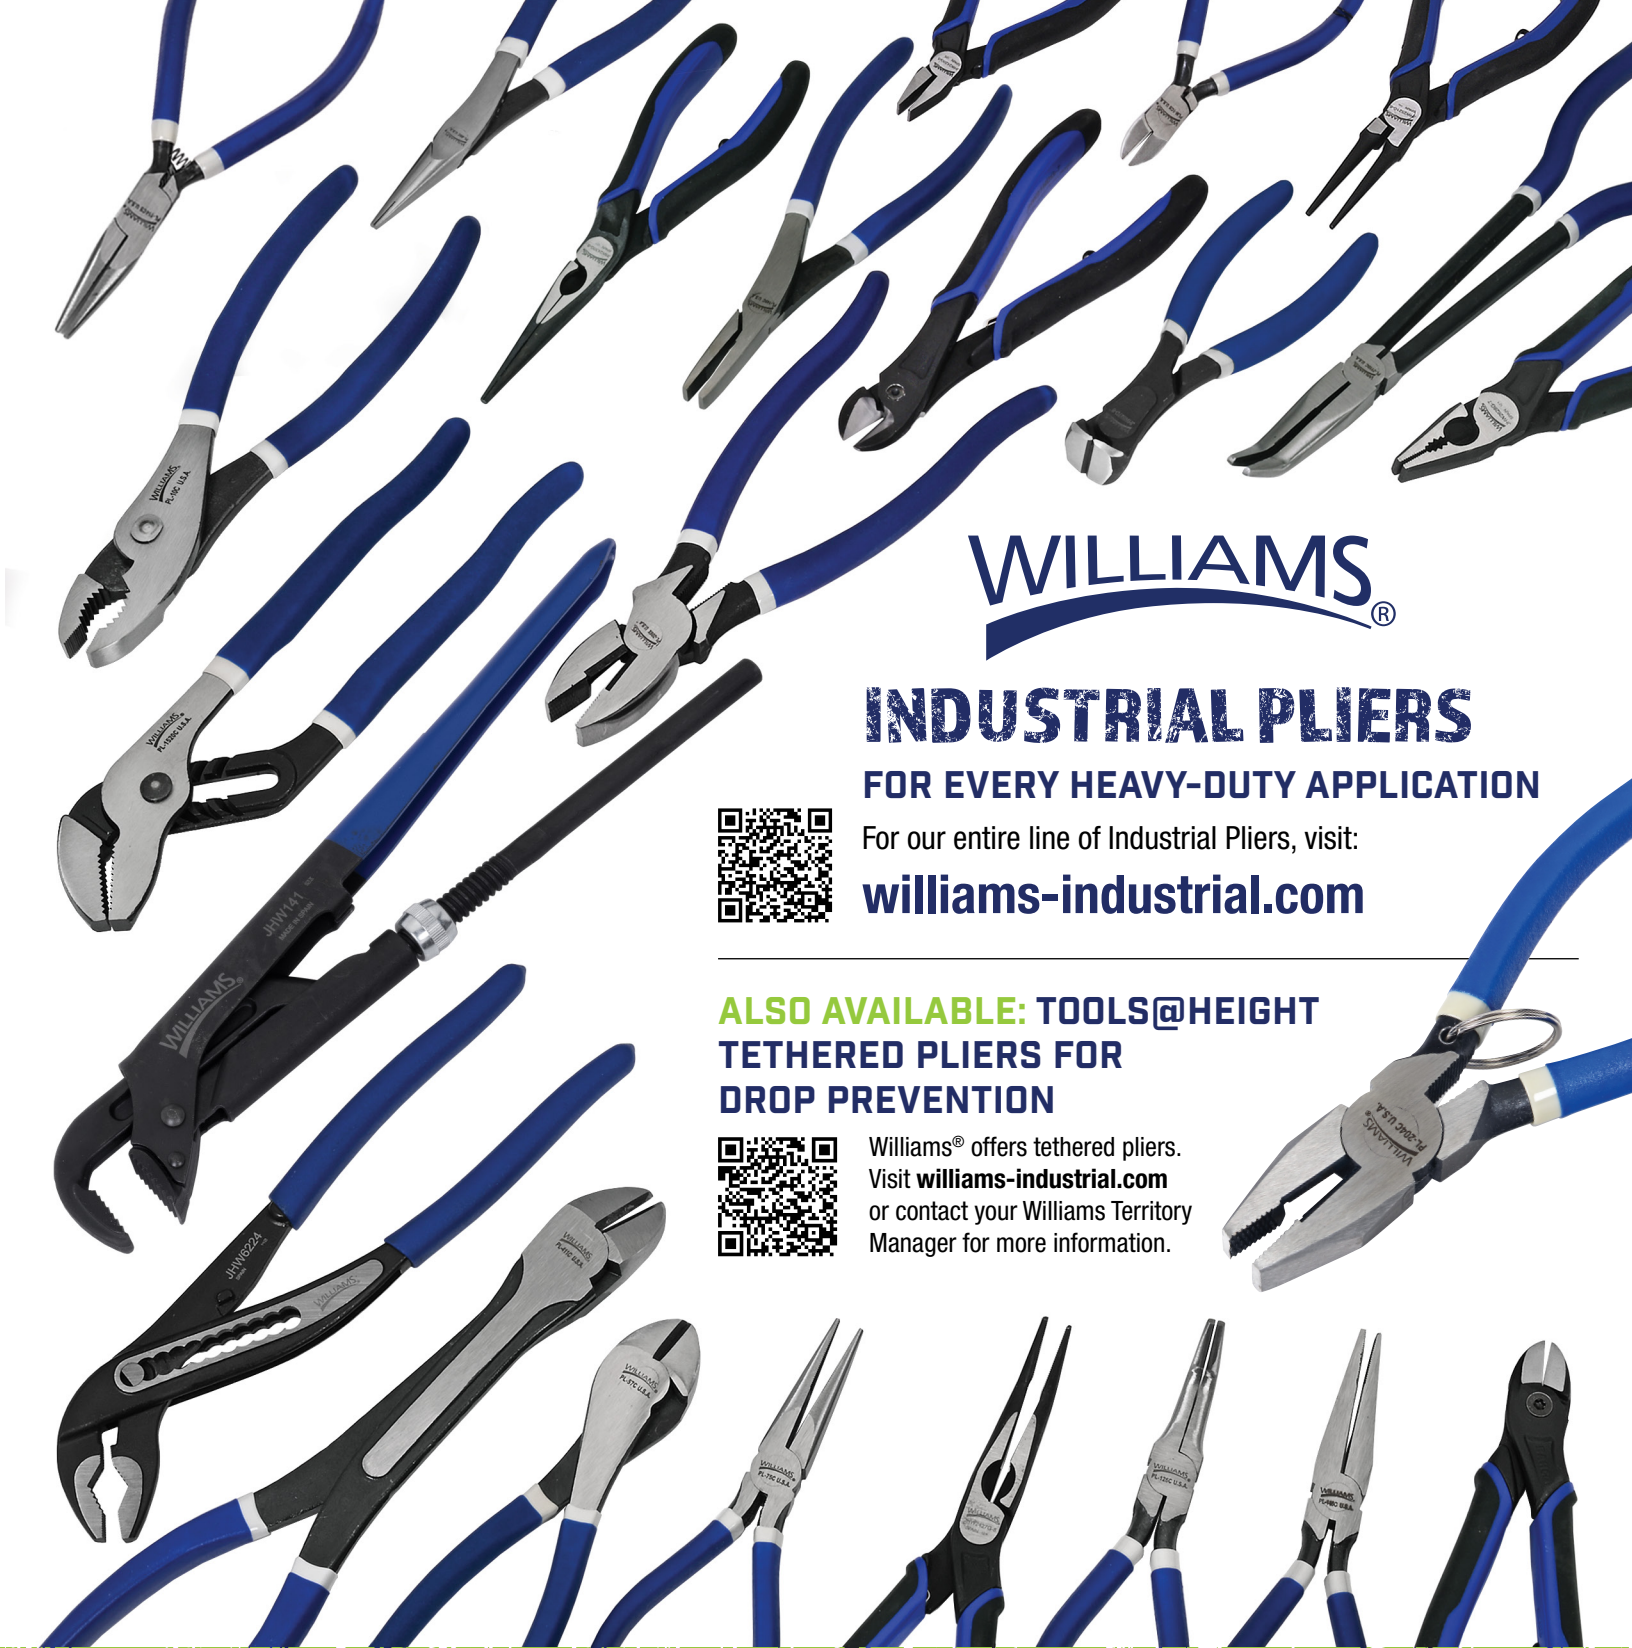

WILLIAMS®

INDUSTRIAL PLIERS

FOR EVERY HEAVY-DUTY APPLICATION



For our entire line of Industrial Pliers, visit:

williams-industrial.com

ALSO AVAILABLE: TOOLS@HEIGHT TETHERED PLIERS FOR DROP PREVENTION



Williams® offers tethered pliers. Visit williams-industrial.com or contact your Williams Territory Manager for more information.



VIEW OUR ENTIRE CATALOG OF WILLIAMS® INDUSTRIAL TOOLS

WILLIAMS®

Williams-Industrial.com

USA: 800-446-7404

Canada: 800-296-4787



TRAIN WITH THE BEST - Williams® Territory Managers have the knowledge and experience to train your employees on the safe and effective use of Williams® Industrial Tools. Contact your Territory Manager for more information.

Williams® is a trademark of Snap-on Incorporated. © Snap-on Incorporated 2022. All other marks are trademarks of their respective holders. Snap-on Industrial, 2801 80th Street, Kenosha WI 53143

WILLIAMS® 2022 Q3 USA/CNE 0000268068 6/2022

