



# RATCHETS & SOCKETS

HEAVY DUTY FASTENER MANAGEMENT

# AMERICAN MADE AND READY TO WORK

## RATCHETS

MADE WITH THE STRENGTH YOU NEED FOR INDUSTRIAL APPLICATIONS



Made in U.S.A.

**Narrow profile** provides greater accessibility in tight spaces

**Single pawl ratchet featuring 36-tooth gear** (on Flex and Enclosed Head ratchets)

- Tighter tolerances between pawl and gear reduces metal fatigue and slippage under load
- Does not require as many working parts, reducing possible breakage and parts to repair
- 10° of engagement allowing easier ratcheting in tight conditions

Ask your Williams Territory Manager why the **location of the screws** are important

**Rounded lever design** reduces potential for shear off

**ENCLOSED HEAD RATCHETS**

**REMOVABLE HANDLE RATCHETS**

### LOCATION OF THE RATCHET'S FRICTION BALL

and the ball detent on the sockets creates a one piece design giving the user confidence that the tool will not lose engagement with the fastener.



### ENCLOSED HEAD

prevents industrial workspace dust, dirt and liquids from entering head, preserving internal lubrication. The debris will not get into the ratcheting mechanism, ensuring it works properly for years to come.

### 3/4" AND 1" DRIVE REMOVABLE HANDLE RATCHETS

add length when you need extra leverage for your job. The Removable handle makes the tool more versatile and easier to store.

# STRONG.

Williams special blend of steel allows for a higher heat treat than average steel. This means each tool gets just the right hardness, toughness, and strength for industrial applications.

# VALUED.

With 140 years of experience, people trust Williams to design and manufacture tools that are safe, strong and reliable.

# WORKING SINCE 1882

## CHROME/IMPACT SOCKETS

### WITH SUPERTORQUE™ LOBULAR OPENINGS

for greater turning power without deforming fasteners



Made in U.S.A.

**Cold Formed** from alloy steel, precision machined and fully heat treated



CHROME SOCKETS

**Chamfered ends** provide easy engagement of the drive tool and fastener

**Shallow Hex Depth** allows fasteners to be easily engaged on short threaded bolts, enhancing accessibility



**Designed for maximum engagement** on 6 point and 12 point fasteners

**Heat treated** for impact use to provide long life, safety, and durability

IMPACT SOCKETS



**Grip Rings** allow for a firm hold to easily remove sockets even with greasy or gloved hands



**Heavy Duty** - suitable for use with pneumatic and electric impact wrenches



## DID YOU KNOW?

WILLIAMS® OFFERS AN ENTIRE LINE OF **TOOLS@HEIGHT** RATCHETS AND SOCKETS MADE SPECIFICALLY FOR DROP PREVENTION.

PLUS, WILLIAMS® **TOOLS@HEIGHT** SOCKETS HAVE BETTER ENGAGEMENT THAN COMPETITOR'S SOCKETS.

**Competitor sockets have**



Only 1 Hole

**Williams® sockets have**





4 Holes



**Ringed Handle Ratchets** for tethering

TOOLS@HEIGHT RATCHETS

To view the entire line of Tools@Height ratchets, sockets and more, visit: [williams-industrial.com](http://williams-industrial.com)

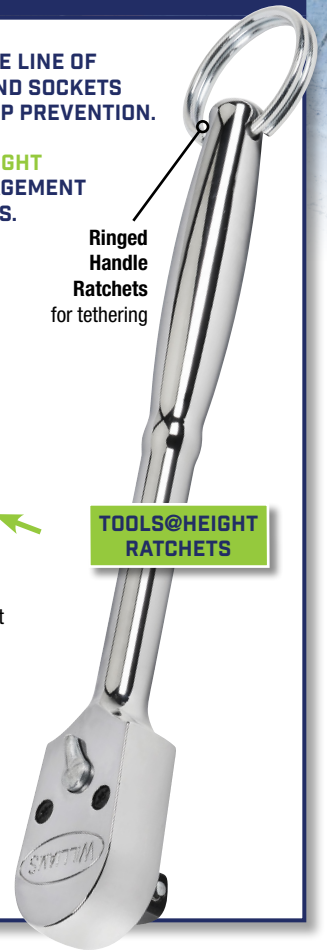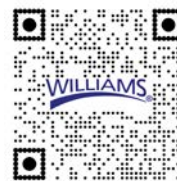

## FLEXTENSIONS



## WILLIAMS® FLEXTENSIONS

are used extensively in engine and heavy equipment manufacturing, assembly, and repair. Designed for use on hand and power tools.

**Not for impact tool use.**



Made in U.S.A.



# DON'T BE LUCKY. BE SAFE.

## GET PROPERLY TRAINED TODAY.

### WORKER SAFETY IS TOP PRIORITY

With over 140 years of experience, Williams can be trusted to design and manufacture tools that are safe, strong and reliable. Keeping your people safe, where it matters most.

LEARN ABOUT  
THE DANGERS  
INVOLVING MISUSED,  
MODIFIED, AND POORLY  
MAINTAINED TOOLS.



**DON'T BE A STATISTIC. SCHEDULE YOUR SAFETY SEMINAR AND TOOL CRIB CRAWL NOW.**

According to the National Safety Council, companies lose 70 million days of work annually due to work-related injuries. Every year, companies lose an estimated 171 billion dollars due to lost productivity, lost wages, medial expenses, plus administrative and uninsured costs.

We know that keeping your people safe is your top priority. That's why Williams offers not just the safest products in the business, but also the training and instruction on how to use them properly.

**Williams Training Programs:**

- Help tool users learn about the dangers involving misused, modified and poorly maintained tools
- Teach tool users how to determine the right tool for any and every job
- Teach tool users the importance of ergonomics, tethered tools, proper calibration and more

Contact your Territory Manager for a free safety seminar or call:  
USA: 800-446-7404  
Canada: 800-296-4787



VIEW OUR ENTIRE CATALOG OF WILLIAMS® INDUSTRIAL TOOLS



**WILLIAMS-INDUSTRIAL.COM**

USA: 800-446-7404

Canada: 800-296-4787



**TRAIN WITH THE BEST** - Williams® Territory Managers have the knowledge and experience to train your employees on the safe and effective use of Williams® Industrial Tools. Contact your Territory Manager for more information.

Williams® is a trademark of Snap-on Incorporated. © Snap-on Incorporated 2022. All other marks are trademarks of their respective holders. Snap-on Industrial, 2801 80th Street, Kenosha WI 53143

WILLIAMS® 2022 Q1 USA/CNE 0000253860 1/2022